


PF4: Angled 'snap' frames on free standing aluminium posts

<u>COMPONENT LIST</u>	A1	A2	A3	A4
Aluminium post, fitted with angled plate	2	2	1	1
Weighted oval base (8mm mild steel, powder-coated)	800x400mm	600x400mm	400x400mm	400x400mm
Spigot (to fix post to base)	2	2	1	1
'Snap' frame on strengthening panel (5mm grey foamex)	A1, 4 holes	A2, 4 holes	A3, 2 holes	A4, 2 holes
Stainless steel bolt (to fix 'snap' frame to post)	4	4	2	2

ASSEMBLY INSTRUCTIONS

FIX BASE(S) TO POST(S)

1. Undo spigot (remove bolt)
2. Put bolt through weighted base plate from underside
3. Part-screw rectangular fitting (comes split diagonally into two parts) back on to bolt
4. Place rectangular part of fitting inside base of upright (opposite end to angled plate)
5. Tighten bolt using large allen key supplied (to lock base securely into upright).

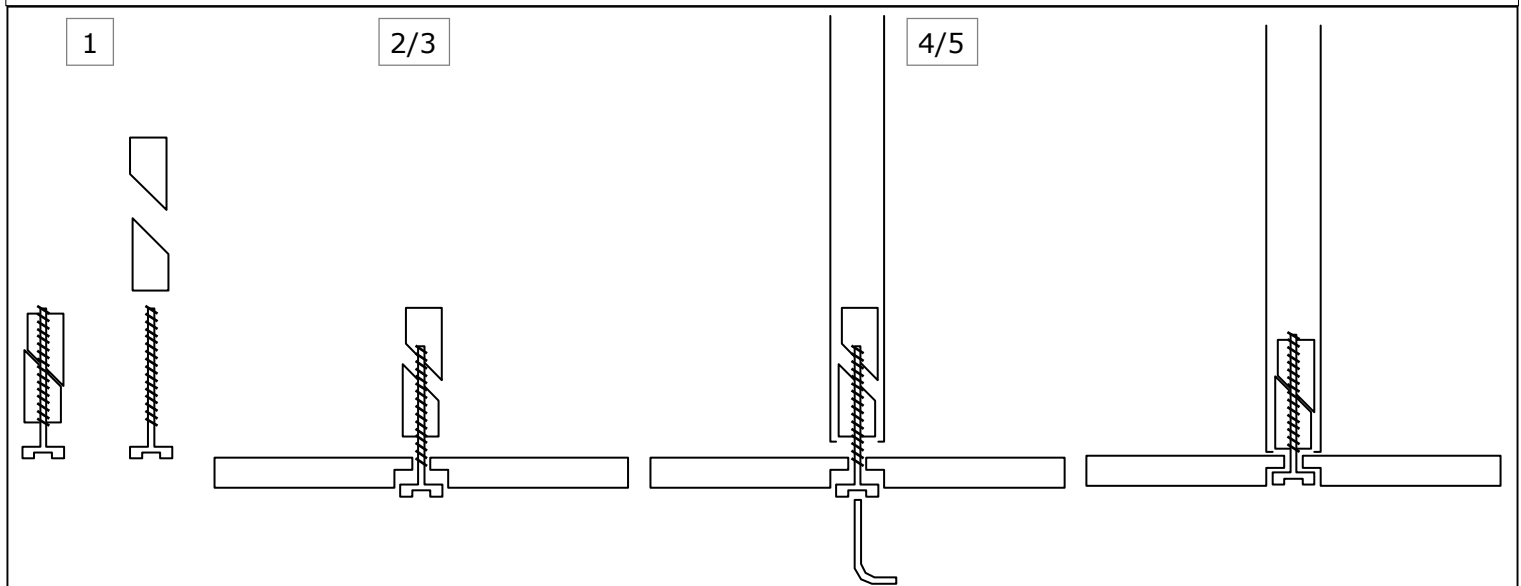

FIX 'SNAP' FRAME TO POST(S)

1. Remove clear front cover from 'snap' frame
2. Position holes pre-drilled in strengthened 'snap' frame over holes in angled plate
3. Use stainless steel bolts supplied to fix to angled plate
4. Replace clear front cover of 'snap' frame

